


OPERATING INSTRUCTIONS

DCD Design & Manufacturing Ltd. SERIES 00501 WIRE GRIP SWIVEL



INSTALLATION

1. Remove the roller pin and roller from the swivel.
2. Insert the eye of the wire mesh grip onto the roller.
3. Replace the roller and pin into the swivel.

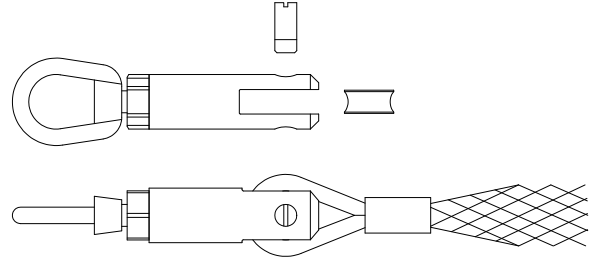

SAFETY



1. The swivel is designed to operate only within its specified **safe working limit** (see *Operating Specifications*). Operation of the swivel at loads in excess of its **safe working limit** will void the warranty even though separation due to failure will not occur until the specified **ultimate load** is reached.
2. For underground use, the recommended safe working limit is 3:1 based on the ultimate load. For overhead use, the required safe working limit is 5:1 based on the ultimate load due to the higher risk of severe personal injury or property damage.
3. Never use a worn, defective or incomplete component. Ensure that all components of the pulling system are able to withstand the maximum pulling loads. Components not rated for the pull force may break and release the stored energy of the pull.
4. Do not modify the swivel. It is only covered by a warranty in its "as shipped" form. Any attempt to modify the swivel will void the warranty and may result in property damage, severe bodily harm, or death.
5. Be prepared for the unexpected. Use recognized safety practices and wear recognized safety equipment.

SERVICE



1. After each use, examine the condition of the swivel. Replace worn or bent clevis pins with original equipment manufacturer's pins.

DCD Design & Manufacturing Ltd., #180 – 6620 McMillan Way Richmond, B.C. V6W 1J7

Toll Free: 1-888-SWIVELS (794-8357)
Tel: 604-232-4445 / Fax: 604-232-4446
Web Site: www.dcdesign.com
E-mail: sales@dcdesign.com

Literature: Series 00501
Rev. -
© Copyright 2009, DCD Design & Manufacturing Ltd.
Printed in Canada