OPERATING INSTRUCTIONS



SERIES 35100-003 Tube Lube™ Manual Applicator

- The Tube Lube[™] Applicator-Kit intended for applying DCD Tube Lube[™] 326 in conjunction with spray nozzles mounted in entry guides.
- 2. A single-tank 3-1/2 gallon manual pump applicator is available. A battery-powered backpack-style applicator (35100-002) is also available.

TAKING THE LID OFF THE SPRAY TANK:


- 1) PRESS THE HANDLE DOWN SO THE PISTON IS BACK INTO THE FULLY COMPRESSED POSITION.
- 2) TURN THE HANDLE COUNTER-CLOCKWISE 4 OR MORE ROTATIONS



3) THE LID WILL NOW BE IN THE 'UNLOCKED' POSITION. LIFT FROM THE HANDLE AND THE LID WILL COME OFF.

THE FOOT OF THE LID IN THE 'UNLOCKED' POSITION.




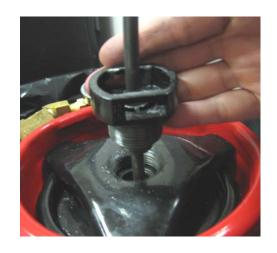

ASSEMBLING THE LID ON TO THE SPRAY TANK:

- 1) PUT THE LID BACK ONTO THE SPRAY TANK
- 2) PRESS THE HANDLE DOWN SO THE PISTON IS BACK INTO THE FULLY COMPRESSED POSITION.
- 3) TURN THE HANDLE CLOCKWISE UNTIL IT FEELS TIGHT AND THE LID IS IN THE 'LOCKED" POSITION.

THE FOOT OF THE LID IN THE 'LOCKED' POSITION.

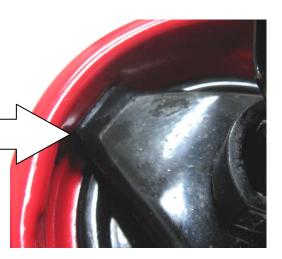

IF YOU ARE UNABLE TO SCREW THE LID BACK ON, PLEASE NOTE THERE NEEDS TO BE SUFFICIENT EXPOSED THREAD ON THE THREADED CAP FOR THE LOCKING MECHANISM TO FUNCTION.

- -THE PICTURE ON THE LEFT SHOWS INSUFFICIENT EXPOSED THREAD.
- -THE PICTURE ON THE RIGHT SHOWS ENOUGH EXPOSED THREAD FOR THE LOCKING MECHANISM TO FUNCTION.



