

OPERATING INSTRUCTIONS




**Design &
Manufacturing Ltd.**

SERIES 58000 CONTROL VALVE



INSTALLATION

1. Feed the line to be blown through the rope guide, valve body, and duct seal device.
2. Attach the line to the line dart.
3. Install the dart and duct seal device in the duct.
4. Connect the control valve to the duct seal device using the quick-connect fitting.
5. Ensure the valve handle is in the closed position.
6. Connect the control valve to the air compressor supply line.
7. Pressurize the air compressor supply line.
8. Slowly open the control valve handle to begin blowing.

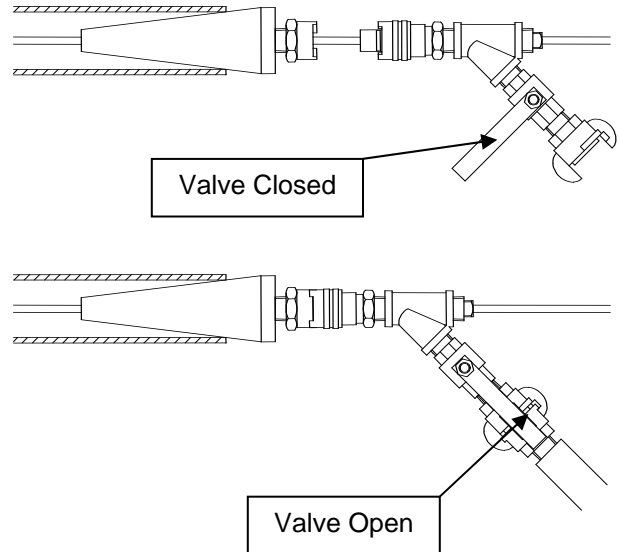

SAFETY



1. Always ensure that the control valve handle is in the closed position before engaging or disengaging any of the air connections.
2. Never use a worn, defective or incomplete component. Ensure that all components of the system are able to withstand the maximum system pressures. Components not rated for the system pressure may fail and release the stored energy.
3. Do not modify the control valve. It is only covered by a warranty in its "as shipped" form. Any attempt to modify the control valve will void the warranty and may result in property damage, severe bodily harm, or death.
4. Be prepared for the unexpected. Use recognized safety practices and wear recognized safety equipment.

SERVICE



1. There are no service or maintenance procedures for this product. The rope guides are available as individual items.